

Honeywell Vista 10SE


Wiring the MN01-4G Cellular Communicator and Programming the Panel

CAUTION:

- It is advised that an experienced alarm installer programs the panel as further programming may be required to ensure proper performance and use of the full functionality.
- Do not route any wiring over circuit board.
- Full panel testing, and signal confirmation, must be completed by the installer.

Wiring the MN01-4G to the Alarm Panel

MN01-4G

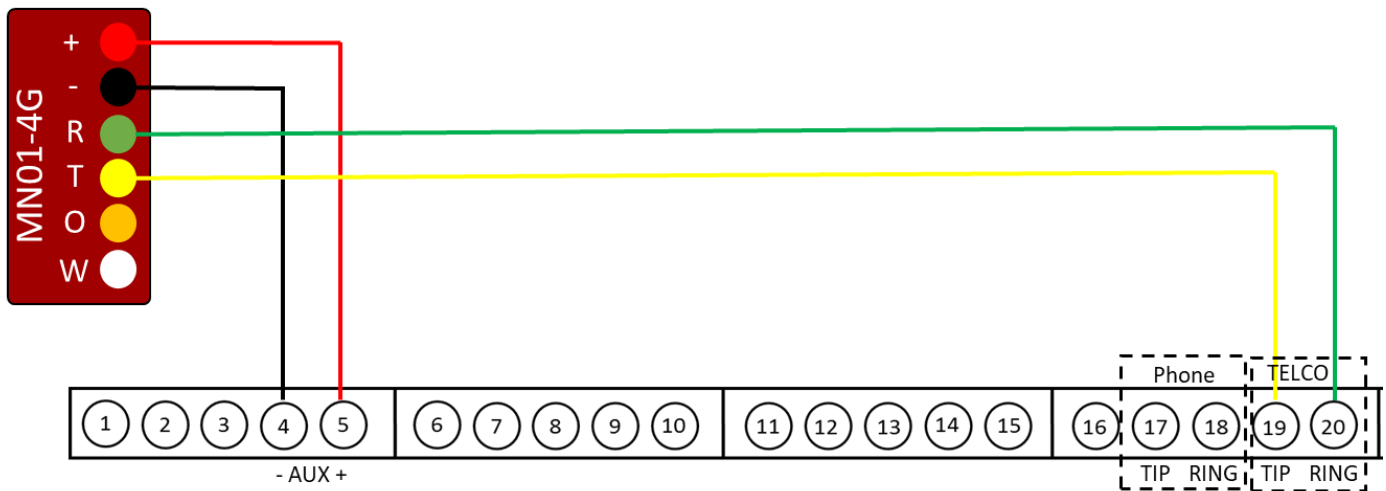

NOTE: The Vista 10SE does not have a Keypad and therefore doesn't support the remote ARM/DISARM interactive feature of our smartphone application. The white and orange wires of the MiNi01-4G are not used. The event reporting still works in the app and you will receive notifications on your smartphone.

Programming the Honeywell Vista 10SE Alarm Panel via the Keypad

Enable Contact ID reporting:

Keypad Display	Keypad Entry	Action Description
Ready to Arm	4111 800	Enter installer code 4111, followed by 800 to enter Programming mode.
Installer code 20	*41	To go to Primary phone number menu.
Prim. Phone	123456*	Enter actual or imaginary phone to report to (123456 is an example), * to set.
Field?	43	To go to subscriber account number.
Sub ID	1234	Set the account number you will receive events from (1234 is an example).
Phone Sys 45	1	Press 1 to select tone dialing.
Rep format 46	7	Press 7 to select Ademco Contact ID reporting.
Split/Dual 47	0	Press 0 to disable Split/Dual reporting.
15 Sec Dial Dly 48	*65	To go to Open/Exit Alarm reporting code.
Open/Exit Rpt 65	11	Enter a number different from 0 to enable.
Away/Stay Rpt 66	11	Enter a number different from 0 to enable.
RF LB Rpt 67	*70	To go to Alarm Restore/Open code.
Alm. Res. Rpt 70	1	Enter 1 to enable.
Trb Res Rpt 71	*99	To exit programming mode.