


Honeywell Vista 20SE

Wiring the MN01-4G Cellular Communicator and Programming the Panel

CAUTION:

- It is advised that an experienced alarm installer programs the panel as further programming may be required to ensure proper performance and use of the full functionality.
- Do not route any wiring over circuit board.
- Full panel testing, and signal confirmation, must be completed by the installer.

Wiring the MN01-4G to the Alarm Panel

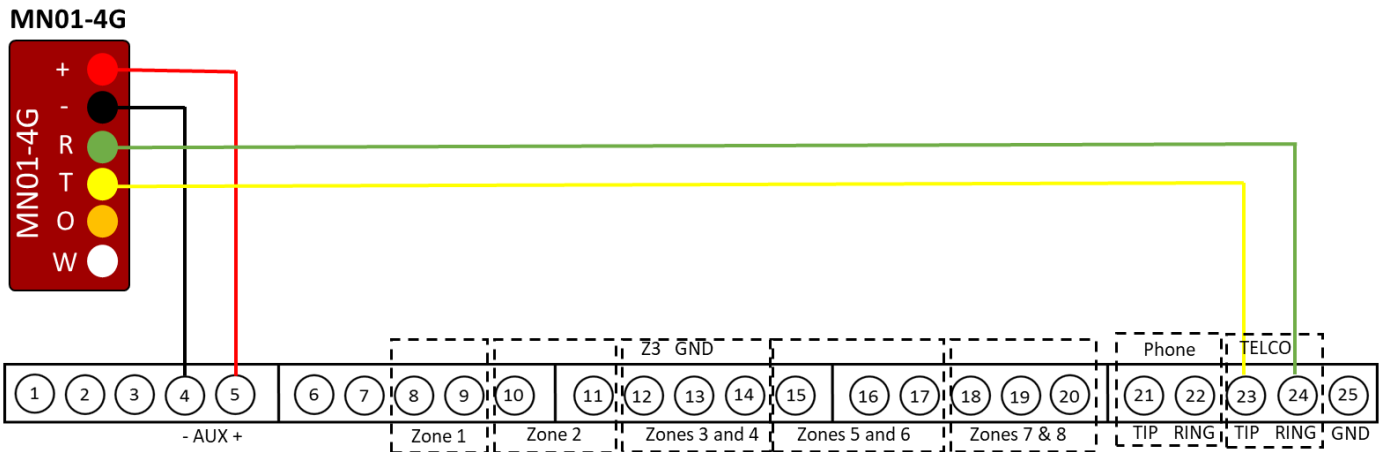

NOTE:

Be advised that the VISTA20SE doesn't have a keyswitch.
 All zones without sensors must be closed with 2K Ohm resistors.

Programming the Honeywell Vista 20SE Alarm Panel via the Keypad

Enable Contact ID reporting:

Keypad Display	Keypad entry	Action description
DISARMED	4112800	To enter programming menu
Installer Code	*41	To start configuring primary phone number
Pri. Phone	123456*	Enter phone number value and press * to save and go back
Field?	*43	To start configuring "Part. 1 Primary Subs. Acct. No."
Pri Subld	1234	Enter account number value
Sec Subld	*47	To enter "Phone system select" menu
Phone Sys	1	To select "Tone Dial" and go back
Field?	*48	To enter "Report format" menu
Rep Form Pri/Sec	7*	To select "Ademco Contact ID" for primary phone number
Field?	*65	To go to "Open report code" setup
Open Rpt	1*	To enable reporting for "Open" event
Field?	*66	To go to "Arm Away/Stay Report Code" menu
Awy/Sty Rp	1, 1*	To enable reporting for "Away/Stay" events
Field?	*92	To go to "TLM" menu
Telco Monitor	0*	To disable TLM and save
#Rpt/Arm	*99	To exit programming mode