


Honeywell FA162

Wiring the MN01-4G Cellular Communicator and Programming the Panel

CAUTION:

- It is advised that an experienced alarm installer programs the panel as further programming may be required to ensure proper performance and use of the full functionality.
- Do not route any wiring over circuit board.
- Full panel testing, and signal confirmation, must be completed by the installer.

Wiring the MN01-4G to the Alarm Panel

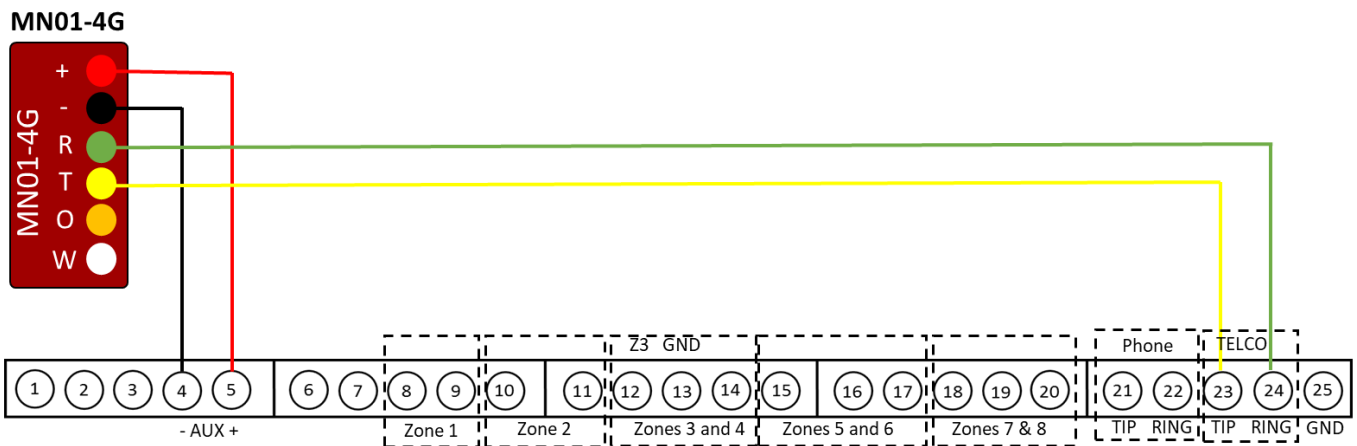

IMPORTANT NOTE: The Open/Close reporting needs to be enabled during the initial pairing procedure.

Programming the Honeywell FA162 Alarm Panel via the Keypad

Enable Contact ID reporting:

Keypad Display	Keypad Entry	Action Description
	4112,8,00	To enter the programming menu.
20	*41	To go to primary phone setting.
	123456*	Enter phone number (123456 is an example) * to save.
	*43	To go to primary account number.
	1234	Enter account number (1234 is an example) * to save.
	*47	To go to phone system menu.
	1	Press 1 to select tone dialing.
	48	To choose Report Format.
	77	To select Ademco Contact ID reporting.
	*65	To go to Open Report code.
	1	To enable Open report code.
	*66	To Arm Away/Stay Rpt Code.
	11	To enable Away/Stay ARM reporting code.
	*70	To go to Alarm/Restore reporting code.
	1	To enable alarm/Restore reporting code.
	*99	To exit and save.