


Honeywell Vista 15SE

Wiring the MN01-4G Cellular Communicator and Programming the Panel

CAUTION:

- It is advised that an experienced alarm installer programs the panel as further programming may be required to ensure proper performance and use of the full functionality.
- Do not route any wiring over circuit board.
- Full panel testing, and signal confirmation, must be completed by the installer.

Wiring the MN01-4G to the Alarm Panel

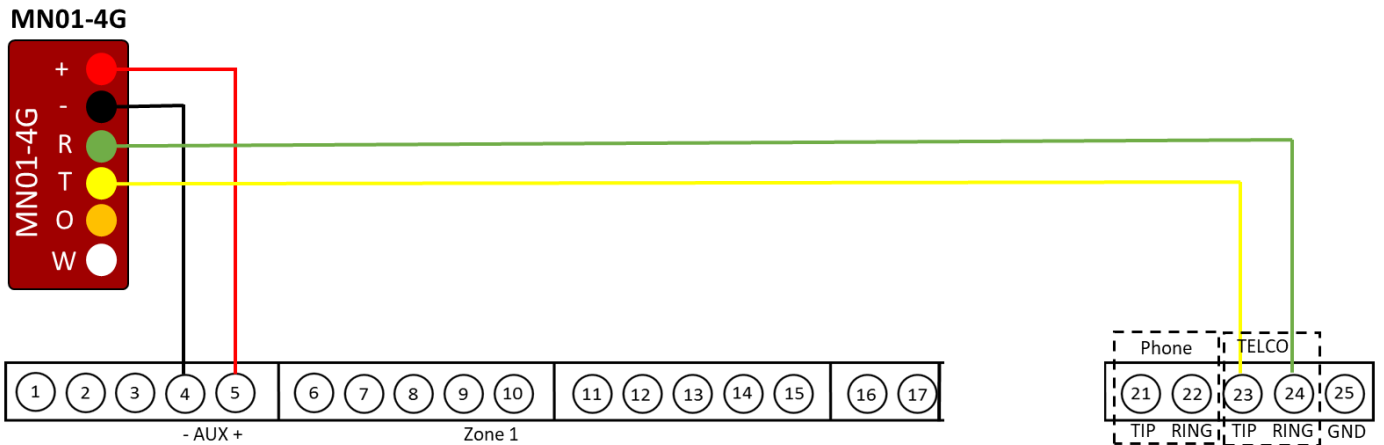

NOTE: Be advised that the VISTA15SE doesn't have a keyswitch.
All zones without sensors must be closed with 2 KΩ resistors.

Programming the Honeywell Vista 15SE Alarm Panel via the Keypad

Enable Contact ID reporting:

Keypad Display	Keypad Entry	Action Description
DISARMED	4112800	To enter programming menu.
Installer Code	*41	To start configuring primary phone number.
Pri. Phone	123456*	Enter phone number value and press * to save and go back.
Field?	*43	To start configuring "Part. 1 Primary Subs. Acct. No."
Pri SubId	1234*	Enter account number value and press * to save and go back.
Sec SubId	*45	To enter "Phone system select" menu.
Phone Sys	1*	To select "Tone Dial" and go back.
Field?	*46	To enter "Report format" menu.
Rep Form Pri/Sec	7*	To select "Ademco Contact ID" for primary phone number.
Field?	*65	To go to "Open report code" setup.
Open Rpt	1*	To enable reporting for "Open" event.
Field?	*66	To go to "Arm Away/Stay Report Code" menu.
Awy/Sty Rp	1, 1*	To enable reporting for "Away/Stay" events.
Field?	*92	To go to "TLM" menu.
Telco Monitor	0*	To disable TLM and save.
Field?	*99	To exit programming mode.